KE シリーズ 時刻設定マニュアル



システム情報の画面が表示されましたら、「日付/時間」を選択 2. します。



「日付/時間」の画面が表示されましたら、「日付/時間」を選 3. 択します。



1. メニューを表示し、「システム」→「システム情報」を選択しま 4. カレンダー画面が表示されますので、「YEAR」を選択し、西暦 を「1970」に変更します。

EH/ME								
121101/040302						1		1
71	1245-	8						
		я 🗌	2月		YEA	2 19	70	
	8	朣	*	ж.	赤		±	
	1	2	3	4		6	7	4
	8	9	10	11	12	13	14	
	15	16	17	18	19	20	21	
	22	23	24	25	26	27	28	
								4
		14	804/4/	66) 06	:	:	18	4
	0		2000		10.3			
		1	¥41		195			101
	6		0		1002	-		

5 「保存」を選択します。



システム情報画面に戻りますので、「保存」を選択して完了で 6 す。

